



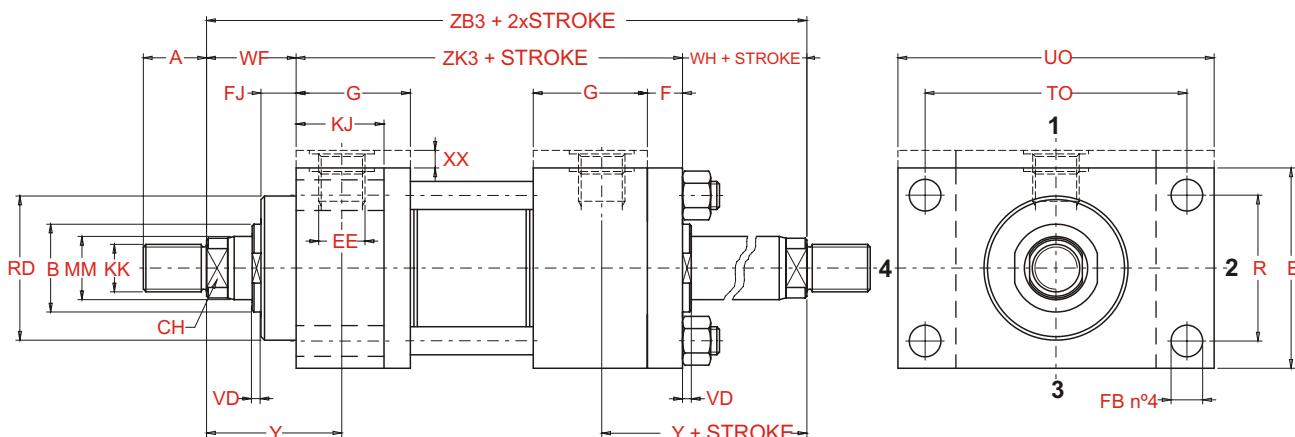

Double rod head flange

ME5

Type 13

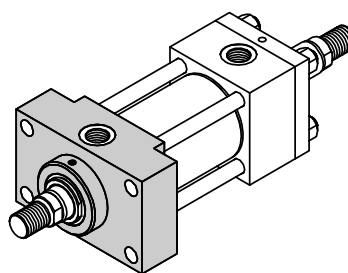

MM - Rod diameter

Bore Ø	MM Ø	A max	B f9	CH	XX	E	EE (BSP)	KK (Metric)	F max	G	FB H13	FJ	KJ	RD f8	R JS13	TO JS13	UO max	VD	WF ±2	WH ±2	ZB3 ±2	ZK3 ±1	
25	12	14	24	9	5	40 ±1,5	1/4"	M10x1,25	10	45	5,5	10	35	38	27	51	64	6	25	15	149	109	
	18	18	30	14				M14x1,5															
32	14	16	26	11	5	45 ±1,5	1/4"	M12x1,25	10	45	6,6	10	36	42	33	58	70	12	35	25	172	112	
	18	18	30	14				M14x1,5										6					
	22	22	34	17				M16x1,5										12					
40	18	18	30	14	-	60 ±1,5	3/8"	M14x1,5	10	55	11	10	45	62	41	87	110	6	35	25	198	138	
	22	22	34	17				M16x1,5										12					
	28	28	42	22				M20x1,5										10					
	22	22	34	17				M16x1,5										7					
50	28	28	42	22	-	75 ±1,5	1/2"	M20x1,5	15	55	14	16	45	74	52	105	130	7	41	26	210	143	
	36	36	50	30				M27x2										10					
	28	28	42	22				M20x1,5										7					
63	36	36	50	30	-	90 ±1,5	1/2"	M27x2	15	55	14	16	45	75	65	117	142	7	48	33	226	145	
	45	45	60	36				M33x2						10				88					14
	36	36	50	30				M27x2						5				82					
80	45	45	60	36	-	114 ±1,5	3/4"	M33x2	20	65	18	20	50	105	83	149	180	9	51	31	254	172	
	56	56	72	50				M42x2						9				105					
	45	45	60	36				M33x2						7				92					
100	56	56	72	50	-	126 ±2	3/4"	M42x2	22	69	18	22	50	125	97	162	200	7	57	35	274	182	
	70	63	88	60				M48x2						10				125					
	56	56	72	50				M42x2						6				105					
125	70	63	88	60	-	164 ±2	1"	M48x2	22	78	22	22	55	150	126	208	240	10	57	35	312	220	
	90	85	108	75				M64x3						10				150					
	70	63	88	60				M48x2						6				125					
160	90	85	108	80	-	198 ±2	1"	M64x3	25	86	26	25	63	170	155	253	300	7	57	32	325	236	
	110	95	133	100				M80x3						10				170					
	90	85	108	80				M64x3						6				150					
200	110	95	133	100	-	240 ±2	1" 1/4	M80x3	25	103	33	25	80	210	190	300	350	7	57	32	379	290	
	140	112	163	130				M100x3						10				210					
	90	85	108	80				M64x3						6				150					

 


How to order a HYDROMAT A3 series cylinder compliant with ISO 6020/2

The HYDROMAT A3 series cylinders compliant with ISO 6020/2 standards are provided with an identification code which describes the construction specifications in a non-ambiguous way. To make up the code for the order, follow the code diagram set out below and insert the letters identifying the various features of the desired cylinder in the sequence given below.

Features	Description	Code
Series	To ISO 6020/2 standards To ISO 6020/2 standards with magnetic sensor ¹⁾ To ISO 6020/2 stand. for taking lin. transducers ²⁾	A3 M3 T3
Bore	Specify bore in mm (indicate 3 figures)	-
Rod MM (diameter)	12 mm (bore 25) 14 mm (bore 32) 18 mm (bore 25, 32 and 40) 22 mm (bore 32, 40 and 50) 28 mm (bore 40, 50 and 63) 36 mm (bore 50, 63 and 80) 45 mm (bore 63, 80 and 100) 56 mm (bore 80, 100 and 125) 70 mm (bore 100, 125 and 160) 90 mm (bore 125, 160 and 200) 110 mm (bore 160 and 200) 140 mm (bore 200)	A B D F H L M P R T V Z
Stroke	Specify the stroke in mm (indicate 4 figures)	-
Rod type	Without cushioning Front cushioning Rear cushioning Cushioning on both ends Double rod without cushioning Double rod with cushioning	C E G P S T
Special machining of rod end	Light male thread Female thread Light female thread Customised thread	x w y z
Mounting type	Basic version (not in line to ISO 6020/2) Rectangular front flange (not in line to ISO 6020/2) Rectangular rear flange (not in line to ISO 6020/2) Side foot (ISO MS2) Head trunnion (ISO MT1) Cap trunnion (ISO MT2) Intermediate fixed trunnion (ISO MT4) Rear clevis (ISO MP3) Rear spherical bearing (ISO MP5) Cap fixed clevis (IS MP1) Extended front tie rods (ISO MX3) Extended rear tie rods (ISO MX2) Extended on both ends tie rods (ISO MX1) Head flange (ISO ME5) Cap flange (ISO ME6) Front screwed tapped holes (ISO MX5) Rear screwed tapped holes (ISO MX6)	00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 30 31

Cylinder ordering code




Omit if is not look for

Example of cylinder code:
A3063H0125E02

A3 = series differential Cylinder compliant with ISO 6020/2
063 = bore 63
H = rod 28
125 = stroke 125
E = front cushioning
02 = rectangular rear flange (not compliant with ISO standards).

The positions of the inlet connections and front cushion are standard so they are not specified in the order code (oil feeding inlets side 1 on head and cap - cushion side 3 on head

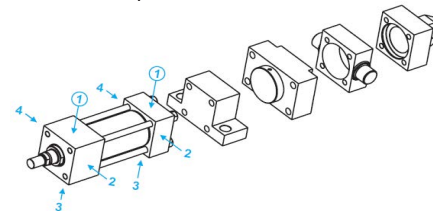

When issuing the order for the cylinder, provide the following information:

- code identifying the model
- quantity
- special features (if requested) with any enclosed sketches and/or construction drawings
- operating conditions for special uses
- delivery date with type of priority

Code	Description	Features
K00	Specify the position of the front and rear inductive sensors	Position of inductive sensors
S00	Specify the position of the front and rear air bleeds	Position of air bleeds
R00	Specify the position of the front and rear braking adjustment devices	Position of braking adjustment devices
P00	Specify the position of front and rear connections	Position of connections
-	Specify the number of spacers (multiples of 50 mm)	Spacers
T U ³⁾ V ⁴⁾	Seals for water and glycol mixtures Low friction seals Seals for high temperatures and/or aggressive fluids	Seals
D ⁵⁾ E ⁵⁾ F ⁵⁾	Front inductive sensor Rear inductive sensor Front and rear inductive sensor	Inductive sensors
A B C ⁶⁾	Front air bleed Rear air bleed Front and rear air bleeds	Air bleed

- 3) Minimum working pressure: 20 bar
- 4) Max. working temp. for M3, T3 and A3 series cylinders fitted with inductive sensors: 70 °C
- 5) Using inductive sensors, the cylinder must be provided with cushioning (front or rear)
- 6) Not available for bores 25 and 32, see page 42
- 6) Compulsory for T3 series cylinders

Example of cylinder code:
A3100M0400PW10/FUP14K22

A3 = series differential Cylinder compliant with ISO 6020/2 standards
100 = bore 100, **M** = rod 45, **0400** = stroke 400,
P = cushioning on both ends,
W = female thread rod ends
10 = extended front tie rods (ISO Mx3)
F = front and rear inductive sensor, **U** = low friction seals
P = position of incoming connections side 1 on the head and side 4 on the cap
K = position of inductive sensor side 2 on head and 2 on cap

- standard cushion position side 3 on head and cap (see Table 19 on page 64).

¹⁾ Not available for bores 160 and 200, see page 40

²⁾ Not available for bores 25, 32, 40 (rods 18 and 22), 50 (rod 22), see page 43